


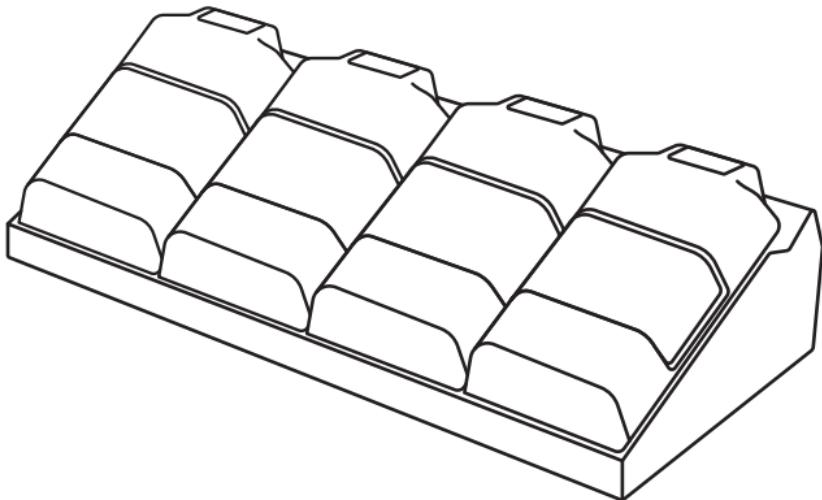

4-Slot Battery Charger

User Manual



 **WARNING**

To reduce risk of injury, the user must read and understand the User Manual before using this product. Save the instructions for further use.

Model A9V-C

Safety Instructions

i *Read all safety warnings, instructions, illustrations and specifications. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

i *Save all warnings and instructions for future reference.*

The term smart glasses in the warnings refers to your battery-operated viewer.

ELECTRICAL SAFETY

Do not expose smart glasses to rain or wet conditions. Water entering a smart glasses will increase the risk of electric shock.

Do not charge battery pack in rain, snow, damp or wet locations.

CHARGER USE AND CARE

Charge battery pack only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

Use smart glasses only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

After charging or before attempting any cleaning, unplug the charger from the power source. Pull by plug rather than cord whenever disconnecting charger.

Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.

Do not operate charger with damaged cord or plug.

Do not operate or disassemble charger if it has received a sharp blow, been dropped, or otherwise damaged in any way. Incorrect use or reassembly may result in a risk of electric shock or fire.

Follow all charging instructions and do not charge the battery pack outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

Specifications

Model Number	516MA00XX
Input Voltage Current	12V/4A
Output Voltage/Current	4.2V/2A
Weight	390g

Charging

1. Plug the battery charger into the supplied AC voltage source.
 2. Insert the battery into charger until it stops.
 3. When the battery is inserted, the charging light will begin blinking green. When the battery has finished charging, the charging light will change to solid green.
-  *If there is any error during charging, the charging light will change to red. Unplug the battery pack and contact Vuzix support.*
4. Charging time varies. A typical charge from empty to full will take two hours.
 5. After charging, remove the battery from charger.

Wall Mount Instructions

Make sure to use two screws for hanging the charger on the wall.

1. Fix the two screws for hanging on the wall.
2. Extra cable can be routed and secured on the back of the charger.
3. Hang the charger on the screws

Storage

Store the battery pack indoors in a place that is inaccessible to children. Keep away from corrosive agents.

Battery Care

i When batteries are not in the smart glasses or charger, keep them away from metal objects.

To protect terminals from shorting DO NOT place batteries in a tool box or pocket with nails, screws, keys, etc. Fire or injury may result.

DO NOT PUT BATTERIES INTO FIRE OR EXPOSE TO HIGH HEAT.

They may explode.

Battery Disposal

i Do not attempt to disassemble the battery or remove any component projecting from the battery terminals.
Fire or injury may result.

Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. Lithium-Ion Batteries: If equipped with a lithium-ion battery, the battery must be collected, recycled or disposed of in an environmentally sound manner.

For more information on Vuzix products and accessories visit:

vuzix.com | vuzix.jp

Vuzix Corporation
25 Hendrix Road
West Henrietta, NY, USA 14586

© 2025 Vuzix Corporation. These instructions are subject to change. Please read the Safety and Warranty booklet before operating this product. All trademarks belong to the respective owners.

516PB0004 (0001) - LX1 CHARGER USER MANUAL



v1.3 10/25