


## Dominant Eye Orientation

The LX1 can be worn in either left or right eye orientation. Refer to page 4 of the User Manual to determine your dominant eye. Flip the headband and device over to select orientation. For left eye, the control buttons will be on the bottom. For right eye, the buttons will be on top.

Left Eye Orientation

Right Eye Orientation

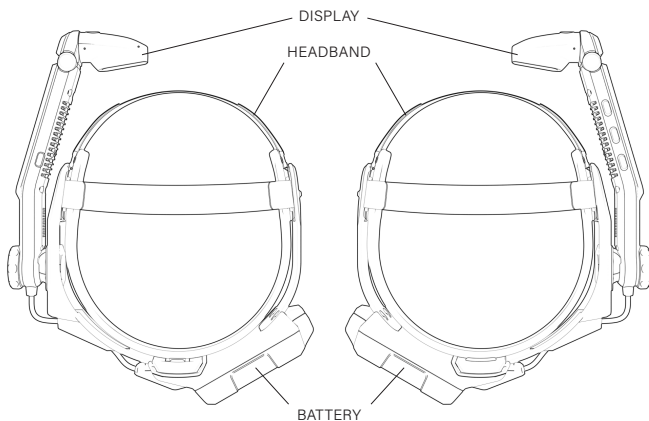


TOP VIEW


TOP VIEW

# Headband Mounting

For either left or right mounting, insert the tab into the slot, then rotate the tab and strap 90° to lock the tab into place. Align the red eye icon with the red L or R markings depending on eye orientation. Repeat this procedure for each side.

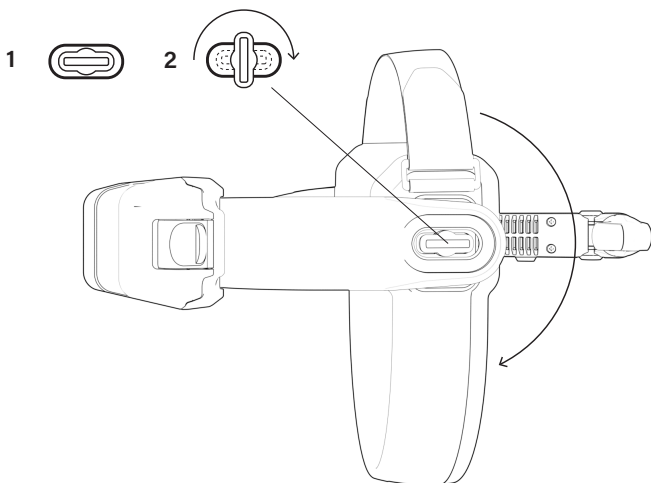


- 3** Slide the blue rear strap down over the plastic hook marked blue to secure the headband into place.

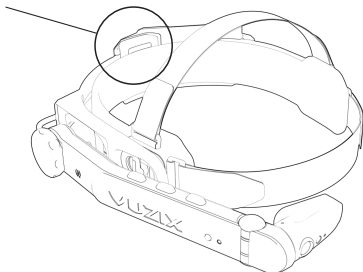

## Name Tag

The user can mark the name tag with a permanent marker to identify their headband.

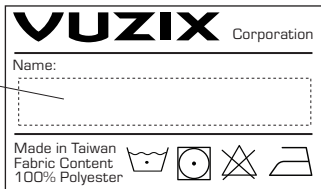

## Headband Care & Cleaning

- Machine wash cold with like colors
- Tumble dry low
- Do not dry clean
- Do not bleach

---

For more information on Vuzix products and accessories visit:

**vuzix.com | vuzix.jp**

Vuzix Corporation  
25 Hendrix Road  
West Henrietta, NY, USA 14586

© 2025 Vuzix Corporation. These instructions are subject to change. Please read the Safety and Warranty booklet before operating this product. All trademarks belong to the respective owners.

516PB0005 (0001) - LX1 MOUNTING GUIDE

